

17 Troubleshooting

Below are explanations for some of the common prompts displayed by the terminal during the **Installation Process**.

PROMPT	POSSIBLE CAUSE	REMEDY
CANNOT CONTACT GEMS IS THIS A DIRECT LINE? YES: PRESS ENTER NO: PRESS ALPHA	The terminal has a problem contacting the host computer.	Follow instructions displayed.
TERMINAL INSTALLATION CANNOT CONTACT GEMS PLEASE CALL HELPDESK ON: nnnnnnnnnnnnnnnnn	The terminal still cannot contact the Host computer.	You should contact the Helpdesk.
PIN PAD FAILURE CHECK CONNECTIONS AND THEN PRESS ENTER	The PINpad is not connected properly or is faulty.	Check that the PINpad is connected. The terminal will try to connect to the PINpad once again.
PIN PAD FAILURE PLEASE CALL HELPDESK ON: nnnnnnnnnnnnnnnnn	The PINpad still cannot connect to the terminal.	Please contact the Helpdesk.

Below are explanations for some of the common general prompts displayed by the terminal.

PROMPT	POSSIBLE CAUSE	REMEDY
CALL AUTH CENTRE	Assistance Required.	Call the Authorisation Centre on the number displayed by the terminal.
CALL HELPDESK	Assistance Required.	Please contact your Helpdesk.
DECLINED PRESS ALPHA	The card issuer has declined to authorise the transaction.	Ask the customer to pay by some other means.
NOT AUTHORISED PRESS ALPHA	The card issuer has declined to authorise the transaction.	Ask the customer to pay by some other means.
REFERRAL <MAY CONTAIN ADDITIONAL DATA AFTER THE WORD REFERRAL>	Assistance Required.	Call the Authorisation Centre on the number displayed by the terminal.
PIN LOCKED CALL CARD ISSUER	The PINpad will show this display if the customer has incorrectly entered their PIN number three times.	The customer should contact the card issuer to have their card unlocked.

01150-90164-002
COPYRIGHT © 2005 Ingenico UK Limited
ALL RIGHTS RESERVED

Contents


1	Introduction	1
2	Important Safety Information	3
3	Connecting Your Equipment	7
4	Installation Procedure	8
5	Terminal and PINpad Features	9
6	Training	12
7	Transaction Processing	12
	7.1 SALE Transaction	12
	7.2 REFUND	13
	7.3 Cash Advance	14
	7.4 Purchase with Cashback	14
	7.5 Pre-Authorisation	15
	7.6 Completion	15
	7.7 Mail & Telephone Orders and Key Entered Transactions	16
	7.8 Reversals (If supported)	17
8	Miscellaneous Transaction Displays	17
	8.1 PIN Entry	17
	8.2 Tips/Gratuities (If Supported)	18
	8.3 Card Security Code / Address Verification Service (CSC/AVS)	19
	8.4 Entering/Correcting Data	21
	8.5 Signature Verification	22
	8.6 Waiter ID's	22
9	Totals	24
	9.1 Totals with Gratuity (Waiter Totals)	25
	9.2 Banking	25
	9.3 Totals Receipt	26
10	Paper Loading Instructions	27
11	How to Change the Date and Time	28
12	Optional Telephone	29
13	Moving the Terminal	29
14	Insuring the Terminal	29
15	Call Management Facilities	30
16	Helpful Hints	30
17	Troubleshooting	31

1 Introduction

 
Your TT41 PIN Terminal will arrive already assembled.

- Cashier Unit** : Incorporates the Keypad, display and Integral Chip Card Reader.
Expansion Unit : Holds the terminal software.
Printer : Depending on the terminal type ordered, can be either Integral or Standalone.
PINpad : Incorporates a keypad, display and Chip Card Reader to be used by cardholders.


DO NOT remove any of these modules unless instructed to do so.

 When a PINpad is correctly installed with the terminal the Integral Chip Card Reader is disabled.
ALL Chip Cards must be inserted in the PINpad.

TT41 Terminal with Integral Printer and PINpad

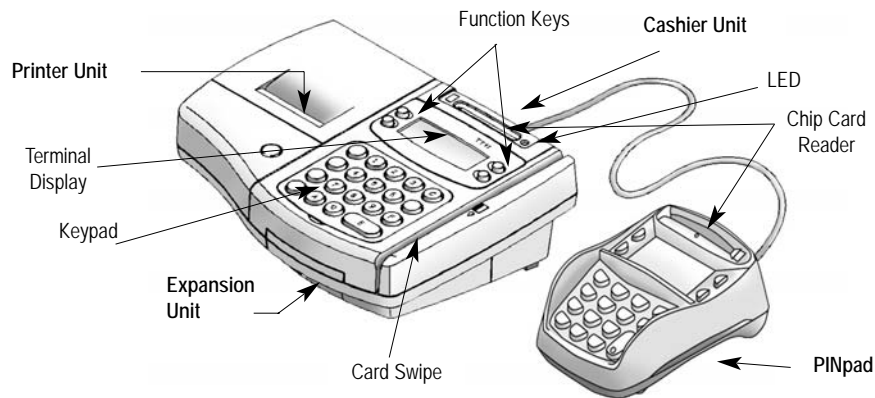

 TT41 Terminal with Standalone Printer and PINpad

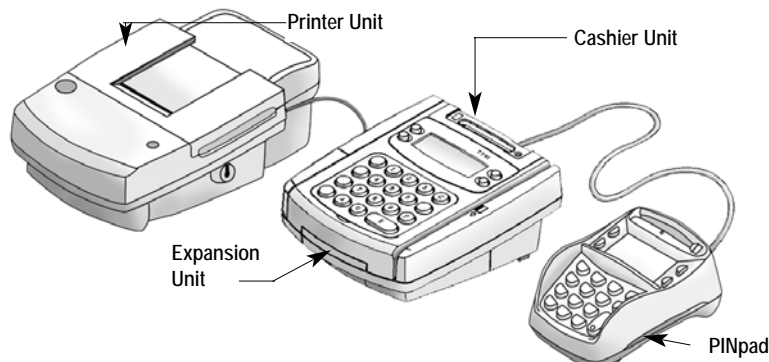

15 Call Management Facilities

Many telephone network providers offer a call management facility like BT 1571 (UK only) and the call waiting service. To alert you to the fact that there is a message waiting an interrupted dial tone will be heard when using the telephone. Unfortunately this interrupted dial tone interferes with the point of sale device and prevents the terminal(s) from dialling out for installation, authorisation or maintenance requests. This dial tone may affect other equipment such as an alarm system.

We highly recommend that this facility be removed from the telephone line that is used by your terminal(s). To arrange this you will need to contact your network provider. If the facility is not removed and you experience problems dialling out from your terminal, please ensure that you check all your messages before contacting the Helpdesk.

Your bank will not be liable to you for any losses or costs which you incur in connection with the service if the terminal is connected to a telephone line utilising a call management facility.

16 Helpful Hints

Terminal Tips

- Your terminal should be left in your retail premises and plugged into a 24 hour power supply and telephone line at all times.
- If the terminal display is blank, check to see if the power supply has been turned off or the power lead has been disconnected.
- If you have poor quality printing, change the paper roll.
- Keep your Supervisor card in a secure place. Anyone with access to this card may perform unauthorised refunds.

Financial Tips

- Always check you have keyed in the correct amount before going ahead with the transaction.
- If you are referred for an authorisation code, read the amount from the slip to ensure you have the correct amount. (It has been known for the amount of 2,000.00 to be keyed instead of 200.00. A code is then obtained for the 200.00 but the cardholder is debited for the keyed amount of 2,000.00)
- Check that the amount on your banking slip balances with your till total.
- Check your bank statement on a regular basis to ensure you are receiving your correct credits.
- Remember to reconcile the terminal every day as this generates the funds to your bank account.
- 'Z-Totals' are running totals for your records and do not generate funds to your account.
- Keep your copy paper rolls in a safe place as on occasion you may be asked to provide copies.
- Please ensure that Refund transactions show as **REFUND ACCEPTED**.
- To allow your bank to answer your monthly service charge or bank statement queries efficiently, always have your monthly service charge statement or bank statement to hand when you call.
- If you see the message 'Totals not Agreed' when you do your End of Day Banking, contact the Helpdesk.
- There may be a charge for providing copy details, so do not request copies of a whole months trading if you are only querying a couple of days.
- If the terminal cannot contact the acquirers host, the transactions may be stored on the terminal. If 'Stored' is printed on your End of Day report you should contact the Helpdesk.

←

ADMIN MENU

→

30. RESET DATE/TIME

<Date>

<Time>

PRESS ENTER TO CONTINUE

Press ENTER again to confirm. At this point you may be asked to swipe the Supervisor card

The terminal will display the current date and time. Use the numeric keyboard to key in the correct date and time
(Note: To change the time only, use the ALPHA key to move the cursor along to the time field)

When you have finished changing the date and time, press the ENTER key. If the date is invalid the terminal will beep and wait for you to enter a valid date.

The terminal will return to the READY prompt

12 Optional Telephone

Your TT41 terminal may have been supplied with a telephone. The telephone will allow you to speak to the Authorisation Centre when it is necessary.



Telephone

13 Moving the Terminal

Please contact the Helpdesk :

- a) If your terminal is 'Polled' at night and you want to move it to another telephone line with a different telephone number.
- b) If you process Pre-Pay transactions and you wish to move your terminal to another telephone line with a different telephone number.

 
Failure to contact us may result in delayed credits to your account.

14 Insuring the Terminal

Although you rent your terminal from your bank for a monthly charge, it is strongly recommended that you insure the terminal against loss or damage to a value as recommended by your acquirer.

Items Supplied with your Terminal

The following items are supplied with a new terminal.

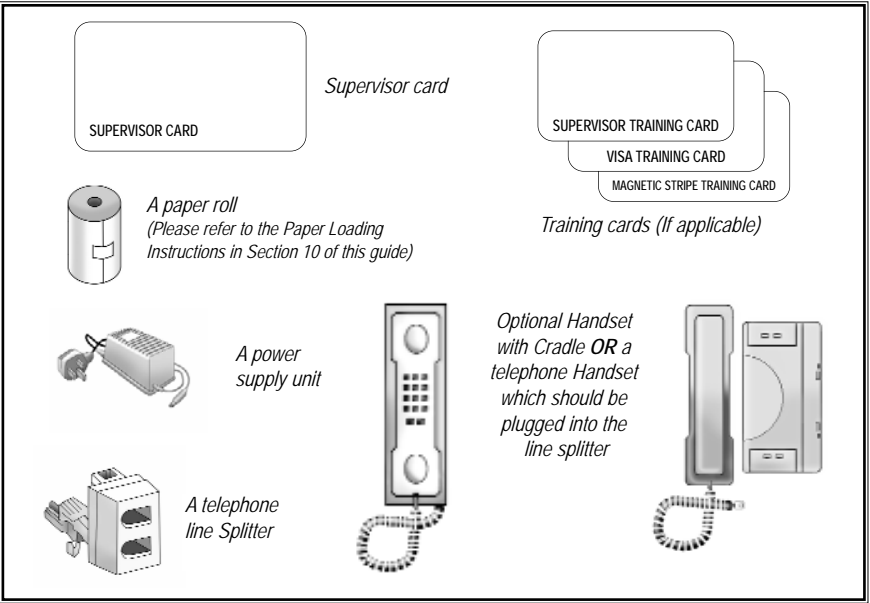

2 Important Safety Instructions

Take care when unpacking and inspect the product for any obvious external or suspected internal damage. When in doubt do not proceed to install or operate the equipment. Contact your supplier.

General Safety Information

This equipment has been designed and manufactured to meet international safety standards but, like any electrical apparatus, due care must still be taken.

- Do read and understand the instructions before using the equipment.
- Do Not expose this apparatus to rain or moisture. For indoor use only.
- Do Not remove any screws or non-operator accessible covers.
- Do Not insert any metallic objects.
- Do Not stack telephone splitters.
- Do Not allow liquid to spill into cabinet openings.
- Do Not allow anything to rest on the power or telecom cords and ensure all cables are routed to prevent damage or accidental contact.
- Do Not continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way. Withdraw the mains plug and consult your service agent.

Service Requirements

Operator Access (ESD Precaution)

When inserting or replacing SIM cards (optional) ESD precautions must be taken as this is an Electrostatic (ESD) sensitive area. As a minimum the operator should be 'Electrostatically Discharged' via his/her hand to a suitable metallic earthing point prior to opening this area.

There are no user serviceable parts inside. In the event of equipment malfunction, unplug the power supply. It is the responsibility of users requiring service to report this to the authorised Service Agent.

Lithium Batteries

- Replaceable by service personnel only

Maintenance

Cleaning the Case

- Remove any dust from the case using a damp cloth. To wash off accumulated dirt and grime, use mild soap and water. DO NOT allow any water to enter inside the case.
- DO NOT use solvents, cleaning fluids or abrasives. These materials could damage the plastic housing and any exposed contacts.

External Power Supply

- *Since this product does not have a disconnect device (ON/OFF switch), the Terminal and Power Supply must be installed near a suitable power socket which is easily accessible.*
- *In the event of a hazard or malfunction, the Power Supply Unit should be unplugged from the mains.*
- This apparatus is intended for use when supplied with power from a low voltage external power supply.
- Only an Ingenico approved power supply (CE Marked) specified for use with this terminal may be used.
- The power supply output lead should only be plugged into the product power input socket.

Using the keys provided, unlock and open the printer cover.

Lift the signature panel, and remove the take up spool from the holder.

Cut the paper roll at the paper slot. Press the feed key to remove the remainder of the roll from the printer.

Make sure that the new paper roll has a straight edge. Sit the roll in the paper roll compartment with the start of the paper coming up from the bottom of the roll.

Feed the paper into the paper slot on the printer and press the feed key until at least six inches of paper is fed through the printer.

Now close the signature panel.



Re-fit the end cap on the take up spool ensuring the locking pin is securely in place. Insert the end of the lower copy of the paper roll into the take up spool ensuring the feed gear is on the left hand side.

Place the spool back into the printer. Press the paper feed key to tighten the paper roll.

Feed the top copy of the paper roll through the printer cover and close the cover.

Finally, re-lock the printer cover.

11 How to Change the Date and Time

The terminal has a built in clock which maintains the current date and time. If, for any reason, the date and time need to be changed, this will normally be carried out by the Host computer during download.

Note : The READY prompt will remain displayed on the PINpad throughout.

If you are asked to change the date and time by the Helpdesk please follow these steps:

From the READY prompt press the key on the keypad marked 'FUNCTION'.

ADMIN MENU →
1. PRINT CODES
KEY IN FUNCTION CODE
30
AND THEN PRESS ENTER

Your terminal will display the Admin Menu. Key in the number 30 and, as you do so, the display will change as below.


Now press ENTER

10 Paper Loading Instructions

Some paper rolls have a RED stripe towards the end of the roll. You should change the roll on seeing this as the roll is almost finished. Please be aware that some paper rolls DO NOT have a red stripe signifying the end of the roll.


WARNING : Do NOT operate your terminal without a paper roll inserted as you may damage the printer. This will invalidate your warranty and may incur a charge for a replacement printer.

10.1 Integral Printer

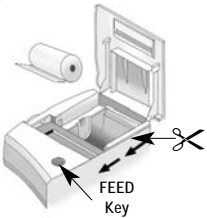- (1) 


Open the printer lid as shown and lift up the old paper roll.

Cut the paper where it enters the printer mechanism and remove the old roll.

Press the FEED Key to remove the remaining paper from the printer mechanism.
- (2) 

Ensure that the new roll has a straight edge.


Place the roll in the compartment with the paper coming up from the bottom of the roll as shown.

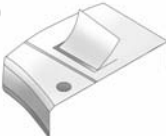Feed the paper into the printer mechanism as far as it will go in.
- (3) 

Press the paper FEED Key until 2 inches of paper appears through the printer mechanism.

Pass the paper through the opening in the lid and close the lid.

 10.2 Standalone Printer

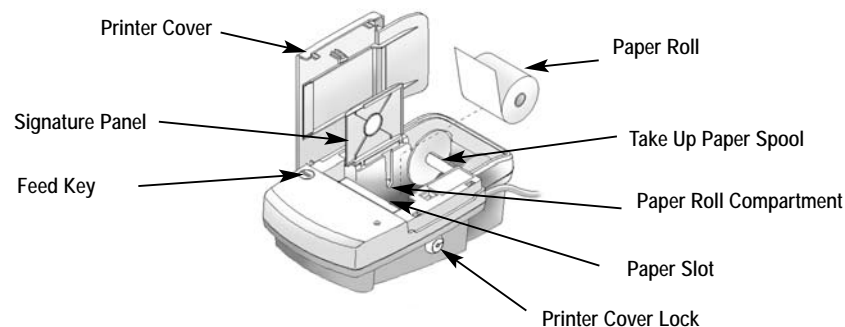

- The power supply will provide adequate power for the Terminal. The user should ensure that all other auxiliary apparatus, drawing power from the host, does not overload the power supply.
- Operate only from a power source as specified on the Power Supply Unit.
- A damaged mains cord (if not a replaceable type) or low voltage secondary input lead cannot be replaced by the user.
- The unit must be returned to the authorised service agent for essential repairs and/or replacement. A replacement unit will be dispatched on request.

Connections *(refer to Section 3 of this guide)*

Interconnection to other equipment via the externally accessible ports on the Terminal must only be made as follows:

- **Power Supply Input :** Operates at Safety Extra Low Voltage (SELV). Connect only to an Ingenico approved Power Supply (CE Marked) specified for use with the Terminal.
- ***Port(s), 8 way :** The RS232 type port(s) operate at SELV and must only be connected to a module of the same type ie. SELV.
- ***Public Switched Telephone Network (PSTN) Line, 6 Way :** MUST only be connected to a PSTN socket e.g. Telephone wall socket, PBX etc.

**Under no circumstances must the PSTN cable be inserted into the RS232 ports. Take due care when attaching cables.*

External Cables

DO NOT use any other external cables and/or cable lengths (must be less than 3M long) other than those specified and/or supplied by the manufacturer. Ensure all cables are routed to prevent damage or accidental contact.

Mounting Hardware

If mounting plates are employed, the operator must take reasonable precautions to ensure that they do not accidentally come into contact with any sharp edges, especially when the mounting plates are mounted but not in use. Always follow the manufacturers instructions. Mounting plates purchased from a manufacturer other than Ingenico are used at the customers own risk.

Analogue Modem (optional)

General Description

The integral modem allows the Terminal to transfer transaction data to card companies host computer systems.

This internal modem supports: CCITT V22bis/V22/V21 and Bell212A/103 data transfer protocols.

It has an automatic dialling facility. Telephone numbers and other modem specific information are pre-programmed and cannot be altered by the user.

Disclaimer

This equipment has been designed for connection to the local Public Switched Telephone Network (PSTN). The apparatus must not be subjected to any modification, in any material way, unless authorised by Ingenico. Nor must it be used with:

- Internal Modem Software that has not been formally accepted by the manufacturer.
- External control Software or external control equipment which causes operation of the modem or associated call set-up equipment to contravene the requirements of the PSTN Network.

Systems to which the Modem may be connected

This Modem is only approved for connection to the following telecommunications systems :

- The Public Switched Telephone Network (PSTN).
- Any equivalent service run by any Licensed Telecommunications Network Operator.
- Private Branch Exchange (PBX) extensions, being a Branch Telecommunications System operating under a licence.

The Modem is not suitable for shared service or 1+1 carrier systems nor as an extension to a pay-phone.
Note : It cannot be guaranteed that the Modem will operate correctly under all possible conditions of connection to PBX's. Any cases of difficulty should be referred in the first instance to Ingenico.

Connection

Line Cord

The modem is connected to the PSTN via a standard plug and flexible cord, which requires a suitable compatible socket (and adaptor if required).

Handset (optional)

The terminal allows the connection of a HANDSET to allow voice communication to a helpdesk. This is regarded as a subsidiary function to the modem. *It has no direct connection to the PSTN and is classed as being non-telephony.*

Dialling

This modem is suitable for connection to direct exchange and/or PBX lines which provide Dual Tone Multi Frequency (DTMF) dialling facilities.

Ringer Equivalence Number (REN) (UK Only)

To Determine the total number of apparatus that should be connected simultaneously to an exclusive PSTN line, the total REN values of each apparatus connected to the line should not exceed the maximum REN value 4.0. This value includes any Network operator provided instrument, each of which is assumed to have a REN value of 1.0 unless otherwise marked.

Regulatory Requirements

Complies with the essential requirements and provisions of :

- the Directive 1999/5/EC of the European Parliament
- the Council of 9 March 1999 on Radio and Telecommunications Terminal Equipment

and the mutual recognition of their conformity and with the provisions of Annex II (conformity Assessment procedure referred to in article 10).

9.3 Totals Receipts

While carrying out Banking or End of Day totals the terminal will print a report showing the transactions processed since the last totals were performed, along with the current totals.

Depending on the set up of your terminal, you may see different styles of reports. If your terminal is an Online terminal the report will be printed as shown in this example.

BANKING TOTALS	
CORNER SHOP HIGH STREET EDINBURGH MERCH NO. 1235678910 TERMINAL ID. 16600124	
<Card Company> TOTALS AGREED	

PREVIOUS TOTALS FOR RECEIPTS	0001-0010
SALE Transactions	
8 2 TOTAL 10	32.00DR 3.00CR 29.00DR
MASTERCARD	
5 1 TOTAL 3	20.00DR 2.00CR 18.00DR
VISA	
3 1 TOTAL 3	12.00DR 1.00CR 11.00DR

CURRENT TOTALS FOR RECEIPTS	0011-0017
REFUND Transactions	
4 2 TOTAL 6	12.00DR 2.00CR 10.00DR
MASTERCARD	
3 1 TOTAL 3	6.00DR 1.00CR 5.00DR
VISA	
1 1 TOTAL 3	6.00DR 1.00CR 5.00DR
10:10 08/01/01 Receipt No	

9.1 Totals with Gratuity (Waiter Totals)

To select WAITER TOTALS press the BANKING key and then select F4 from the main menu displayed.

**WAITER TOTALS
SWIPE SUPERVISOR CARD**

The terminal will prompt you to swipe the supervisor card.

**WAITER TOTALS
PRINTING IN PROGRESS
PLEASE WAIT**

The totals will then be printed.

Once printing is complete the terminal will return to the READY prompt.

9.2 Banking

Banking should be carried out at the end of each business day once the last customer has left the premises. This is to make checking credits and reconciliation with your bank statements easier.

**BANKING WAITER
X-TOTALS Z-TOTALS**

To select End of Day totals for banking press the BANKING key in the bottom left corner of the keyboard. Now press F3 to select BANKING from the menu displayed.

**BANKING
SWIPE SUPERVISOR CARD**

Swipe your Supervisor card through the terminal.

If you have a 'polled' terminal an End of Day Totals report will be printed. **This will complete your Banking procedures.**

**SELECT CARD TYPES TO
BE BANKED
ALL: PRESS ENTER
SELECTIVE: PRESS ALPHA**

If you have an Online terminal, you will now have the choice of selecting totals for ALL card types or making a selection of those card types you wish to Bank.

(a) Press ENTER to select ALL card types.
OR

(b) Press ALPHA to select the card acquirer required. You will be able to scroll through the available card acquirers and select the ones to be banked.

NOTE : You must select each card acquirer individually after the terminal has printed each report.

**END OF DAY BANKING
BANK <ACQUIRER NAME>
YES: PRESS ENTER
NO: PRESS ALPHA**

The terminal will dial out and the display will show the status of the Banking. The display will change as the process continues. Totals are now complete and a Totals report will be printed.

DECLARATION of CONFORMITY

We, the undersigned,

Company	Ingenico UK Ltd
Address, City	Ridge Way, Donibristle Industrial Park, Dalgety Bay, Fife, KY11 9JU
Country	Scotland
Phone number	+44 (0) 131 459 8800
Fax number	+44 (0) 131 479 8321

Certify and declare under our sole responsibility that the following equipment:

Product description / Supplementary info	Point of Sale Terminal
Manufacturer	Cemtron
Brand	Ingenico
Type Designation	TT41

is tested to and conforms with the Electromagnetic Compatibility and essential requirements for protection of health and the safety of the user and any other person as included in following standards.

Standards	Issue Date	Description
EN60950	2000	Product Safety
EN55022	1998	EMS, Emissions
EN50024	1998	EMC, Immunity
EN6100 - 3 - 2	1995	Harmonic Current Emissions
EN6100 - 3 - 2	1995	Voltage Fluctuations and Flicker

and is tested to and conforms with the essential radio test suites so that it effectively uses the frequency spectrum allocated to terrestrial/space radio communication and orbital resources so as to avoid harmful interference, as included in following standards:

Standards	Issue Date
N/A	

and therefore complies with the essential requirements and provisions of the **Directive 1999/EC** of the European Parliament and of the Council of 9 March 1999 on Radio and Telecommunications Terminal Equipment and the mutual recognition of their conformity and with the provisions of Annex II (conformity Assessment procedure referred to in article 10).


The following Notified Bodies have been consulted in the Conformity Assessment procedure:

Notified Body Number	Name and Address
N/A	

The technical documentation as required by the Conformity Assessment procedure is kept at the following address:

Company	Ingenico UK Ltd
Address, City	Ridge Way, Donibristle Industrial Park, Dalgety Bay, Fife, KY11 9JU
Country	Scotland
Phone number	+44 (0) 131 459 8800
Fax number	+44 (0) 131 479 8321

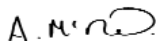

Drawn up in Date	Dalgety Bay 12th May 2000
	 (Signature of Person Responsible)
Name and Function	Alex McNeil, Principle Engineer

 
3 Connecting your Equipment

Whether your terminal has been supplied with an integral or standalone printer, the connection of the PINpad, telephone cable, telephone (*where supplied*) and power supply unit (PSU) are identical for both terminal types.

Your PINpad and telephone cable should already be connected to the base of the terminal. If they are not they should be connected as follows:

- PINpad is connected to Port "0" marked with a RED Label.
- Telephone cable is connected to the port marked "Phone Line".

CAUTION: DO NOT connect the PSU to the mains until ALL units are connected.

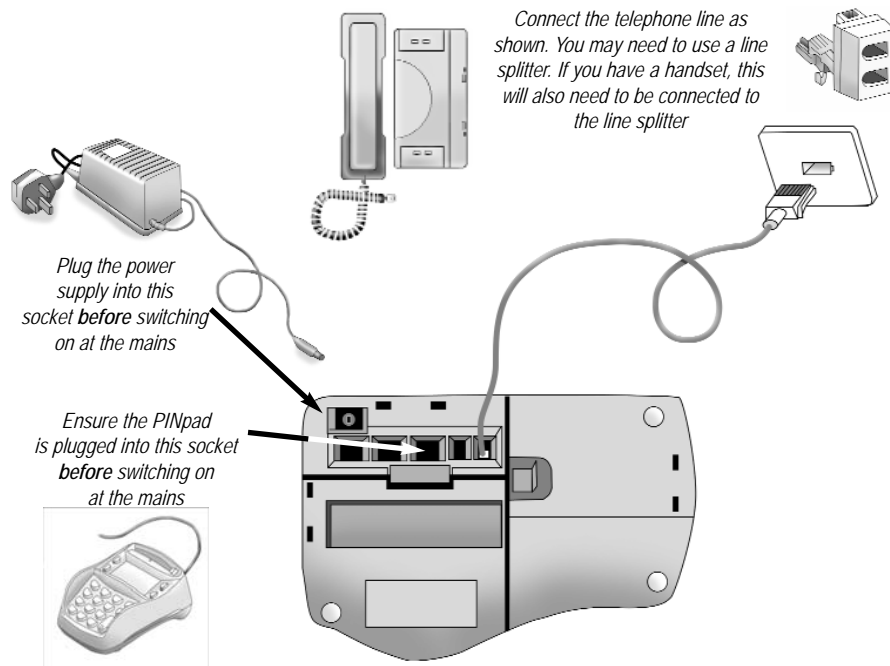

Once ALL the units are connected ensure that the PSU transformer is placed on a solid flat surface. **DO NOT allow it to hang in the air by the cable only.**

Now position the units on a clear area of the counter.

You should be able to read the terminal display and operate the keyboard and magnetic card reader easily. The PINpad should be placed so that your customers can reach it and are able to insert their card into the Chip reader with ease.

Your terminal should have been supplied with a paper roll already installed. If not, please refer to section 10 of this guide for paper loading instructions.

NOW switch on the mains supply and Installation will begin. (*This is described in Section 4*)

9 Totals

Note : Whilst carrying out any Totals function, the READY prompt will remain displayed on the PINpad throughout.

1. From the READY prompt, press the "BANKING" key on the terminal keypad. Various options will be displayed.

F1 for X-Totals

X-Totals may be carried out at any time throughout the day and give a sub-total of all transactions performed.

An X-Totals report looks similar to a Z-Totals report. X-Totals do not reset the totals within the terminal whereas Z-Totals will reset the totals.

F2 for Z-Totals

Z-Totals show you the totals of transactions processed through the terminal for each acquirer since the last Z-Totals request. If no transactions have been processed for a particular acquirer, NO BUSINESS will be printed on the receipt.

Once Z-Totals have been completed the totals within the terminal are reset to zero. This also includes any Waiter Totals (*see Section 9.1 for Totals with Gratuity*)

F3 for Banking (*See Section 9.2 for Banking*)

F4 for Waiter Totals (*See Section 9.1 for Totals with Gratuity*)

2. Swipe your Supervisor Card through the terminal.

X-TOTALS (or Z-TOTALS)
SWIPE SUPERVISOR CARD

3. The totals will be printed for each card scheme per acquirer. If no cards have been acquired then the terminal will print NO BUSINESS for each acquirer.

X-TOTALS (or Z-TOTALS)
PRINTING IN PROGRESS
PRESS WAIT

4. Once printing is complete the terminal will return to the READY prompt.

8.6.2 Adding an Individual Waiter ID

Your terminal can be configured to recognise individual Waiter ID's. These make it possible to identify which staff member has dealt with the transaction. The waiter ID will be printed on the receipt.

Note: The READY prompt will remain displayed on the PINpad throughout.

From the READY prompt press the key on the keypad marked 'FUNCTION'

ADMIN MENU →
1. PRINT CODES

KEY IN FUNCTION CODE
40
AND THEN PRESS ENTER

← ADMIN MENU →
40. WAITER SETUP

PRINT
WAITER SET-UP
ADD DELETE

ADD WAITER CODE nn
KEY IN WAITER'S NAME
aaaaaaaaaaaa
AND THEN PRESS ENTER

1. Your terminal will display the Admin Menu, key in the number 40 and, as you do so, the display will change.

2. Now press ENTER.

3. Press ENTER again to confirm. At this point you may be asked to swipe the Supervisor card.

4. The Waiter Menu will now be displayed. To add a new waiter ID, press the F1 key.

Your terminal will automatically allocate the next available Waiter ID. Key in the text/name description (this field is limited to 10 characters) and press ENTER.

(please refer to Section 8.4.1 of this guide for instructions on how to enter letters).

8.6.3 Deleting a Waiter ID

Follow steps one to three above and then select F2 to delete.

DELETE WAITER
KEY IN CODE TO DELETE
nn
AND THEN PRESS ENTER

DELETE WAITER
CODE nn <Name> ?
YES: PRESS ENTER
NO: PRESS ALPHA

Key in the Waiter ID code that is to be deleted and then press ENTER.

Your terminal will ask you to confirm the deletion. Press ENTER to confirm or ALPHA to abort the function.

Now press CAN/CLR to return to the READY prompt.

4 Installation Procedure

Before you begin the installation procedure please ensure that you have your merchant number to hand. This can be found on your Welcome Letter or on the print plate of your manual imprinter.

The installation should take approximately 15-20 minutes to complete.

The following screens will be displayed when the terminal is first powered up with the PINpad connected. You should follow the prompts.

Terminal	PINpad
TERMINAL INSTALLATION PLUG IN PHONE LINE AND THEN PRESS ENTER	<SOFTWARE VERSION> Ready

Ensure that the telephone cable is connected and then press ENTER.

Terminal	PINpad
TERMINAL INSTALLATION KEY IN MERCHANT NUMBER AND THEN PRESS ENTER	<SOFTWARE VERSION> Ready

Key in your merchant number and then press ENTER.

Terminal	PINpad
KEY IN TEL NO (INC STD) OF LINE TERM CONNECTED TO AND THEN PRESS ENTER	<SOFTWARE VERSION> Ready

Key in the telephone number (including the full STD code) of the phone line to which your terminal is to be connected. **NOTE :** It is important that the correct telephone number is entered at this point.

Various other screens will be displayed during the installation. They will include all or some of the following:

"Dialling GEMS",
"Loading Information",
"Downloading. . . .",
"Dialling <Card Name>",

The terminal will now install the PINpad and the following screen will be displayed :

Terminal	PINpad
UNIT SWAP DIALLING GEMS PLEASE WAIT	You do not have to do anything at this point.

Once the PINpad has been installed successfully the following screen will be displayed :

```
READY →
01-AUG-2005 09 : 30
MERCH : nnnnnnnn
<NON EFT APP>
```

```
READY
01-AUG-2005
```

Your terminal is now READY for use.


Should you encounter any problems with your terminal or PINpad during the installation, then please refer to Section 17 for Installation Troubleshooting.

5 Terminal and PINpad Features

5.1 Terminal Display

The following displays are those shown when the terminal is fully installed and ready to be used.

At each side of the terminal display there are keys marked with an 'F'. Press the 'F' key to which the display arrow is pointing (F4 in this example) and the additional information will be displayed.

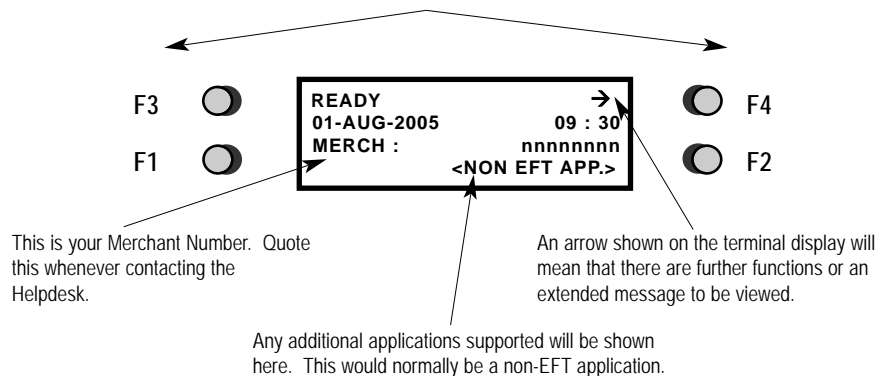

5.2 PINpad Display

```
○ ○  
○ ○
```

```
READY  
01-AUG-2005
```

The PINpad will prompt the customer when to enter and remove their card and what actions are required of them during the transaction process.

In this guide the PINpad displays are shown alongside the terminal displays so that you know what the customer is being asked to do.

8.5 Signature Verification

This functionality is only applicable to Magnetic Swiped transactions and Chip Cards which are not PIN enabled.

The terminal will dial for authorisation, if required. An authorisation code will be displayed. Press ENTER and the terminal will print the receipt. Tear off the receipt and obtain the customers' signature.

8.5.1 Magnetic Swiped Transactions

Check the signature. If it is OK press ENTER and the terminal will print a copy of the receipt for the customer.

Terminal

```
<TRANSACTION TYPE>  
IS SIGNATURE OK?  
YES: PRESS ENTER  
NO: PRESS ALPHA
```

PINpad

```
READY  
01-AUG-2005
```

If you have a printer which uses multi ply paper, only one receipt will be printed. Give the top copy to the customer and retain the duplicate copy for your records.

8.5.2 Chip transactions which are not PIN enabled

The Customer should remove the card and pass it to you so that you may verify that the signature is correct.

```
<TRANSACTION TYPE>  
REMOVE CARD
```

```
<TRANS TYPE>  
REMOVE CARD AND  
HAND TO OPERATOR
```

Check the signature. If it is OK press ENTER and the terminal will print a copy of the receipt for the customer.

```
<TRANSACTION TYPE>  
IS SIGNATURE OK?  
YES: PRESS ENTER  
NO: PRESS ALPHA
```

```
READY  
01-AUG-2005
```

If you have a printer which uses multi ply paper, only one receipt will be printed. Give the top copy to the customer and retain the duplicate copy for your records.

8.6 Waiter ID's (Restaurants Only)

8.6.1 Default Waiter 25

A default waiter, **Waiter 25: SHARED** will be created automatically by the terminal. This can be used if you do not want to create individual Waiter ID's.

 
All Sale transactions with gratuity will add tips/gratuities to this waiter without the need for a waiter ID to be entered during transaction processing.

The total of all 'Waiter 25' tips/gratuities will be printed as part of the Waiter Totals report showing the total value of tips/gratuities performed.

8.4 Entering/Correcting Data

8.4.1 Entering Letters

You can enter letters for authorisation codes to be printed on the Customer's receipt. You can also set Waiter ID's for use with gratuities. This will enable you to print/display waiter names instead of just numbers.

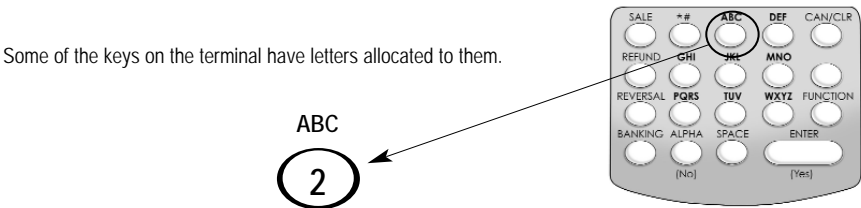

Here is how these letters are entered:

- To enter the left-most letter displayed for the key, press that key and then the ALPHA key **once**.
- To enter the middle letter displayed for the key, press that key and then the ALPHA key **twice**.
- To enter the right-most letter, press the key required and then the ALPHA key **three times**.
- If the key has four letters allocated (e.g. key 7 has PQRS) press that key and then the ALPHA key **four times**.
- To enter a space, press the 0 (Zero) key and then press the ALPHA key **once**.

8.4.2 Cancelling Transactions and Clearing Mistakes

If a mistake is made when entering numbers or letters OR a transaction requires cancelling **before** authorisation, press the CAN/CLR key :

ONCE	to remove the last digit
TWICE	to remove the whole line
THREE TIMES	to cancel the transaction/function being carried out

5.3 Card Readers

5.3.1 Chip Card Reader

Your terminal is supplied with two Chip Card Readers, one on the terminal and one on the PINpad. The reader operation is identical for both.

NOTE : The terminal reader is disabled when the PINpad is installed. All Chip Cards should be inserted into the reader as shown below.




When performing a transaction the LED on the Chip Card Reader will change colour as follows :

GREEN : when a transaction has been initiated and the terminal or PINpad is waiting for a card to be inserted or swiped. The Chip Card should be inserted at this point.

RED : during the transaction processing and whilst a Chip Card is in place in the card reader. The Chip Card should **NOT** be removed at this point.

GREEN : again when the transaction has been completed. The Chip Card should be removed at this point.

5.3.2 Inserting a Chip Card

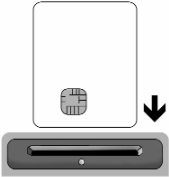


The card should be inserted with the chip facing towards the keypad. All chip cards should be inserted into the PINpad.

If the card is inserted incorrectly, the PINpad will prompt for the card to be removed and reinserted.

If the chip on the card fails when inserted into the PINpad, you will be prompted to swipe the card through the terminal and process the transaction as Swiped. The terminal will prompt you when the card is to be removed.

5.3.3 Swiping a Magnetic Card

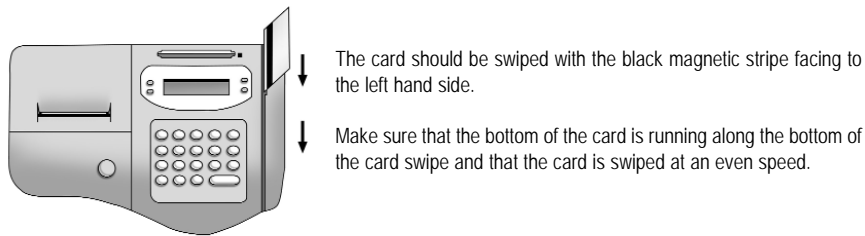

i It is important to swipe cards correctly through the terminal so that they can be read by the card reader.

5.4 Multiple Methods of Payment (Application Selection)

If the customer presents a card which supports more than one method of payment, they will be required to select which method they wish to use. This is referred to as 'Application Selection'.

i For a Refund transaction the customer will NOT be prompted to choose the application. In this case the merchant will carry out the function.

Terminal

**<TRANSACTION TYPE>
CUSTOMER APPLICATION
SELECTION
ENTER TO ASSIST**

PINpad

**<Application Name>
ENTER TO SELECT
TO SCROLL**

The customer should select which application they wish to use. Press ENTER to confirm or press # to scroll through the choices and then press ENTER to confirm the relevant application.

Your terminal may have been set up to allow you to assist the customer in their selection. You should press ENTER to select the application required. This will be required in the case of a refund.

8.3.3 Address Number

Key in the customer's house number and then press the "ENTER" key. (E.g. 21 High Street would be entered as 21)

**<TRANSACTION TYPE>
KEY IN ADDRESS NUMBER
AND THEN PRESS ENTER**

**PROCESSING
PLEASE WAIT
DO NOT REMOVE
CARD**

The terminal will now dial the acquiring bank for authorisation and will display the authorisation code if authorised.

The terminal will display the results of the CSC/AVS checking in the form of a "Message Text". The result will also be printed on the receipt. The "Message Text" may be :

Message Text	Result
ALL MATCH	All data entered is correct
SEC CODE MATCH ONLY	Only the Security Code is correct
ADDRESS MATCH ONLY	Only the address is correct
NO DATA MATCHES	None of the data entered is correct
DATA NOT CHECKED	The data has not been checked

**<TRANSACTION TYPE>
<Message Text>
TO ACCEPT PRESS ENTER
TO DECLINE PRESS ALPHA**

**PROCESSING
PLEASE WAIT
DO NOT REMOVE
CARD**

Depending on the "Message Text" displayed you may wish to accept or decline the transaction.

You should press "ENTER" to accept the transaction or "ALPHA" to decline and the transaction will be cancelled.

The terminal will print a receipt for your records. Press ENTER again and the terminal will print the customer's receipt.

The transaction is now complete and the terminal will return to the READY prompt.

6. The terminal will display the total amount of the transaction INCLUDING the gratuity. The gratuity amount is shown to ensure that the customer is aware of the amount of the gratuity they are giving.
7. The customer should confirm that the amount is correct by pressing enter.

**SALE
GRATUITY BEING ADDED
PLEASE WAIT**

**TOTAL 25.00
GRATUITY 5.00
ENTER TO ACCEPT
CLEAR TO CORRECT**

- To complete the transaction using a PIN enabled Chip Card, the terminal will prompt for PIN Entry. Please refer to Section 8.1 for "PIN Entry" to complete the transaction
OR
- To complete the transaction using "Signature Verification" please refer to Section 8.5 .

8.3 Card Security Code / Address Verification Service (CSC/AVS) *(If supported)*

CSC/AVS is an additional cardholder security check service.

8.3.1 Security Code

You may be asked to key in the 3 digit security code; this can be found on the signature stripe on the back of the customer's card. Now press "ENTER".

Terminal

**<TRANSACTION TYPE>
KEY IN SECURITY CODE

AND THEN PRESS ENTER**

PINpad

**PROCESSING
PLEASE WAIT
DO NOT REMOVE
CARD**



The security code for American Express Cards is a 4 digit code and can be found on the front of the card.

8.3.2 Post Code (UK only)

Key in the numeric digits of the customer's post code and then press the "ENTER" key. (E.g. EH52 5SH would be entered as 525)

**<TRANSACTION TYPE>
KEY IN POST CODE

AND THEN PRESS ENTER**

**PROCESSING
PLEASE WAIT
DO NOT REMOVE
CARD**

6 Training

Please Note : This function may not be applicable to your business. Please refer to your acquirer if in any doubt.

Your terminal uses special *Training Cards* to enable you to practise transactions without affecting your totals.

You will have been provided with a number of training cards :

- A magnetic stripe training card.
- A Supervisor **Training** card.
- A 'chip & PIN' training card (if supplied).

To use the Training function, either swipe the *Training Card* through the terminal or insert the *Chip Training Card* into the chip card reader on your PINpad. The training transaction can now be completed in the usual manner *(please refer to Section 7.1 of this guide for instructions on how to complete a Sale with PIN)*.

When carrying out training, if you select a value between 0 and 49.99 this will simulate a normal transaction. Between 50.00 and 99.00 will simulate a voice referral and above 100.00 will simulate a declined transaction.

All transaction receipts will be marked as ****Training Only**** and the receipt number will be preceded by a T.

Training Totals

Any training transactions that have been performed can be printed as X-totals, Z-totals or End of Day totals. To do this swipe the Supervisor **Training** Card in place of the Supervisor Card when performing totals.

Note : When using the *Training Card* it is not possible to perform the totals function that prints individual Waiter Totals.

7 Transaction Processing

IMPORTANT : Do NOT remove the customer's card from the card reader until prompted to do so. Removing the card will VOID the transaction.



When carrying out a magnetic stripe transaction the PINpad will display "Processing Please wait".

7.1 Sale

1. From the READY prompt, press SALE to initiate a sale transaction.
2. Follow the instructions on the screen displays.

Terminal

**SALE
INSERT CARD IN PINPAD
OR SWIPE CARD**

PINpad

**SALE
INSERT CARD**

3. The card reader will check the card and begin to print the merchant receipt.

- 4 (a) For a normal sale: Key in the transaction amount. Press ENTER when prompted to do so.
 - To complete the transaction using a PIN enabled Chip Card, the terminal will prompt for PIN Entry. Please refer to Section 8.1 for "PIN Entry" to complete the transaction.
 - OR
 - To complete the transaction using "Signature Verification" please refer to Section 8.5.
- 4 (b) For terminals configured to accept Gratuities: The terminal will prompt you to confirm whether the transaction is with or without gratuities.
 - For a Sale with Gratuity, press ENTER and refer to Section 8.2 to complete the transaction.
 - For a Sale without Gratuities transaction, press ALPHA and then key in the transaction amount. Press ENTER when prompted to do so. To complete the transaction please select one of the options in 4(a).

7.2 Refund

1. From the READY prompt, press the REFUND key to initiate a refund transaction.
2. Follow the instructions on the screen displays.

**REFUND
INSERT CARD IN PINPAD
OR SWIPE CARD**

**REFUND
INSERT CARD**

3. The card reader will check the card.
4. You may be asked to swipe the Supervisor card through the terminal. The terminal will begin to print the receipt.
5. Key in the transaction amount and press ENTER when prompted to do so.
 - To complete the transaction using a PIN enabled Chip Card, the terminal will prompt for PIN Entry. Please refer to Section 8.1 for "PIN Entry" to complete the transaction.
 - OR
 - To complete the transaction using "Signature Verification" please refer to Section 8.5.

NOTE : Do NOT remove the Chip Card from the reader until prompted to do so.

8.2 Tips/Gratuity (If supported)

Please note that this option is only available for certain types of business.

1. The terminal may prompt you for a waiter ID If so, enter the ID and press ENTER. (See Section 8.6 for Waiter ID's).
2. Key in the transaction amount when prompted to do so and press ENTER.
3. The PINpad will prompt the customer to confirm if they wish to add a gratuity.
4. Depending on the terminal configuration the customer may be asked to enter the Tips/Gratuity Amount Only (see 8.2.1) or the "New Total" including the gratuity (see 8.2.2).

8.2.1 Add Gratuity Amount Only

5. The customer should enter the amount of the gratuity and press ENTER to accept.

Terminal

**SALE
GRATUITY BEING ADDED
PLEASE WAIT**

PINpad

**AMOUNT 20.00
GRATUITY**

6. The customer should confirm that the amount is correct again. (If it is incorrect they should press the CLEAR Key and re-enter the amount).

**SALE
GRATUITY BEING ADDED
PLEASE WAIT**

**TOTAL 25.00
GRATUITY 5.00
ENTER TO ACCEPT
CLEAR TO CORRECT**

The "Total" shown will include the gratuity amount. The gratuity is shown to ensure that the customer is aware of the amount of the gratuity they are giving.

- To complete the transaction using a PIN enabled Chip Card, the terminal will prompt for PIN Entry. Please refer to Section 8.1 for "PIN Entry" to complete the transaction.
- OR
- To complete the transaction using "Signature Verification" please refer to Section 8.5.

8.2.2 Enter NEW Total (inclusive of Gratuity)

5. The customer should enter the total amount of the transaction INCLUDING the Gratuity and then press ENTER to accept.

**SALE
GRATUITY BEING ADDED
PLEASE WAIT**

**AMOUNT 20.00
ENTER NEW TOTAL
AMOUNT**

7.8 Reversals (If supported)

IMPORTANT : Reversals must be initiated within 30 seconds of the completion of a transaction. It is NOT possible to reverse a transaction after this time.

If a transaction has completed and the customer no longer wishes to pay by card :

1. Press the "REVERSAL" button to reverse (VOID) the transaction.
2. You may be asked to swipe your Supervisor card. Follow the instructions on the screen displays.
3. The terminal will perform the following:
 - May dial the acquiring bank to VOID the transaction.
 - Print a NEW receipt showing that the transaction is VOID.

8 Miscellaneous Transaction Displays

8.1 PIN Entry

1. The customer should enter their PIN number and press ENTER.

Terminal	PINpad
<div><TRANSACTION TYPE> CUSTOMER PIN ENTRY ALPHA TO BYPASS PIN</div>	<div>AMOUNT 5.00 ENTER PIN</div>

2. As the customer enters their PIN the PINpad display will change as follows :

Terminal	PINpad
<div><TRANSACTION TYPE> CUSTOMER PIN ENTRY ALPHA TO BYPASS PIN</div>	<div>PIN **** ENTER TO ACCEPT CLEAR TO CORRECT</div>

(Various displays may be shown if an incorrect PIN has been entered. The user should follow the instructions on the screen displays).



Pressing the ALPHA Key on the terminal will bypass the requirement for the customer to enter their PIN. However, please note: PIN Bypass (where configured) should only be used as a last resort for people who have forgotten their PIN. It is NOT a method of preventing the entry of PIN numbers.

NOTE : The card should NOT be removed from the PINpad until prompted to do so.

3. The terminal will print more of the receipt and then dial for authorisation (if required) and print the authorisation code onto the receipt.
4. Tear off the receipt. This should be kept for your records. The transaction is now complete and the customer can remove their card from the PINpad.
5. A few seconds after the card has been removed a duplicate copy of the receipt will be printed for the customer.



If you have a printer which uses multi ply paper, only one receipt will be printed. Give the top copy to the customer and retain the duplicate copy for your records.

7.3 Cash Advance

Please note that this functionality is only available for certain types of business. Please contact the Helpdesk for further information.

1. From the READY prompt press the F4 key until "Cash" is displayed.

Terminal	PINpad
<div>FORCE → CASH PWCB</div>	<div>READY 01-AUG-2005</div>

2. Press F1 to select "CASH". Follow the instructions on the screen displays.
3. Enter the **cash** amount when prompted to do so and press ENTER.
4. You should now proceed as a normal sale.
 - To complete the transaction using a PIN enabled Chip Card, the terminal will prompt for PIN Entry. Please refer to Section 8.1 for "PIN Entry" to complete the transaction.
 - OR
 - To complete the transaction using "Signature Verification" please refer to Section 8.5.

7.4 Purchase with Cashback

Please note that this functionality is only available for certain types of business. Please contact the Helpdesk for further information.

1. From the READY prompt press the F4 key until "PWCB" is displayed.

Terminal	PINpad
<div>FORCE → CASH PWCB</div>	<div>READY 01-AUG-2005</div>

2. Press F2 to select "PWCB". Follow the instructions on the screen displays.
3. When prompted to do so, key in the amount of the **purchase** and press ENTER.
4. Key in the amount of the **cashback** and press ENTER.
5. The amount will be displayed on the PINpad for the customer to confirm. They should press ENTER to accept.
6. You should now complete the transaction as a normal sale.
 - To complete the transaction using a PIN enabled Chip Card, the terminal will prompt for PIN Entry. Please refer to Section 8.1 for "PIN Entry" to complete the transaction.
 - OR
 - To complete the transaction using "Signature Verification" please refer to Section 8.5.

7.5 Pre-Authorisation


Please note that this functionality is only available for certain types of business. Please contact the Helpdesk for further information.

From the READY prompt press the F4 key **twice** and then press the F1 key to select PRE-AUTH. Follow the instructions on the screen displays.

Terminal	PINpad
<div>→</div> <div>PRE-AUTH COMPLETION</div>	<div>READY</div> <div>01-AUG-2005</div>
<div>PRE-AUTHORISED INSERT CARD IN PINPAD OR SWIPE CARD</div>	<div>PRE-AUTHORISED</div> <div>INSERT CARD</div>

The card reader will check the card and begin to print the merchant receipt.

Key in the transaction amount and press ENTER when prompted to do so. The terminal will dial for authorisation and print a receipt for your records. (Please note : Depending on the configuration of your terminal you may be asked for "Signature Verification" or "PIN Entry" for a pre-auth transaction).

 If the final bill is more than 15% higher than the total pre-authorised amount, a further pre-authorisation will be required for the difference.

7.6 Completion (for Pre-Authorisation)

The following instructions will finally complete a pre-authorised transaction.

From the READY prompt press the F4 key **twice** and then press the F2 key to select COMPLETION. Follow the instructions on the screen displays.

Terminal	PINpad
<div>→</div> <div>PRE-AUTH COMPLETION</div>	<div>READY</div> <div>01-AUG-2005</div>
<div>COMPLETION TRANSACTION INSERT CARD IN PINPAD OR SWIPE CARD</div>	<div>COMPLETION</div> <div>INSERT CARD</div>

The terminal will check the card. Follow the instructions on the screen displays.

Key in the amount of the transaction when prompted to do so and press ENTER.

You should key in the most recently obtained authorisation code of the pre-authorised transaction when prompted to do so and then press the ENTER key.

You should now complete the transaction as a normal sale.

- To complete the transaction using a PIN enabled Chip Card, the terminal will prompt for PIN Entry. Please refer to Section 8.1 for "PIN Entry" to complete the transaction
OR
- To complete the transaction using "Signature Verification" please refer to Section 8.5.

7.7 (A) Mail & Telephone Orders and (B) Manual Key Entry

- (A) Your terminal may allow you to process transactions if the customer is not present e.g. for mail or telephone order transactions.
- (B) If the terminal or PINpad cannot read the card it will be necessary to manually key in the card number.
1. From the "READY" prompt press the "SALE" key. The following screen will be displayed:

Terminal	PINpad
<div>SALE INSERT CARD IN PINPAD OR SWIPE CARD</div>	<div>SALE</div> <div>INSERT CARD</div>

2. Begin to key in the card number using the terminal keypad. As you enter the card number it will be displayed on the terminal. Press ENTER to proceed with the transaction.
3. Follow the on screen displays to enter all the card details. (e.g. expiry date, issue number etc).

 Should you key in a wrong digit while entering the card details please refer to Section 8.4.2 "correcting mistakes".

4. When the following screen is displayed you should press the "ALPHA" key if the customer is not present (i.e. Mail or Telephone Orders) or the "ENTER" key if the customer is present (Manual Key Entry).

<div><TRANSACTION TYPE> IS CUSTOMER PRESENT? YES: PRESS ENTER NO: PRESS ALPHA</div>	<div>PROCESSING PLEASE WAIT</div>
---	---------------------------------------

5. Key in the amount of the transaction when prompted to do so and press ENTER.

PLEASE NOTE: Your terminal may be configured for CSC/AVS checking. If so refer to Section 8.3 for "CSC/AVS Checking" to complete the transaction. If not configured, proceed to point 6 below.

6. The terminal will dial out for authorisation and the authorisation code will be displayed. Press ENTER.
7. A. Mail/Telephone Order Transactions : The terminal will print a receipt for your records. Press ENTER again and the terminal will print the customers receipt. Proceed to point 8.

B. If the customer IS present : The terminal will print a receipt for the customer to sign. Tear off the receipt and obtain the customers signature. You should retain this for your records.

Press ENTER to confirm that the signature is accepted and the terminal will print a copy of the receipt for the customer.

8. The transaction is now complete and the terminal will return to the READY prompt.